

October 2020



[noForth website](#)


Seeed Studio GD32VF dev board with noForth r(cv)

1. Seeed Studio GD32VF dev board
 - i/o port connections
 - Connectors
 - Hardware
2. i/o Ports
 - Port addresses
 - Port register offsets
 - Values for port control (CRL/CRH)-Registers
3. RS232/USB driver
4. noForth memory map
5. interrupt vector table

In this text we refer to these two documents:

- GD32VF103_Datasheet_Rev1.0.pdf
- GD32VF103_User_Manual_EN_V1.2.pdf

1. Seeed Studio GD32VF dev board

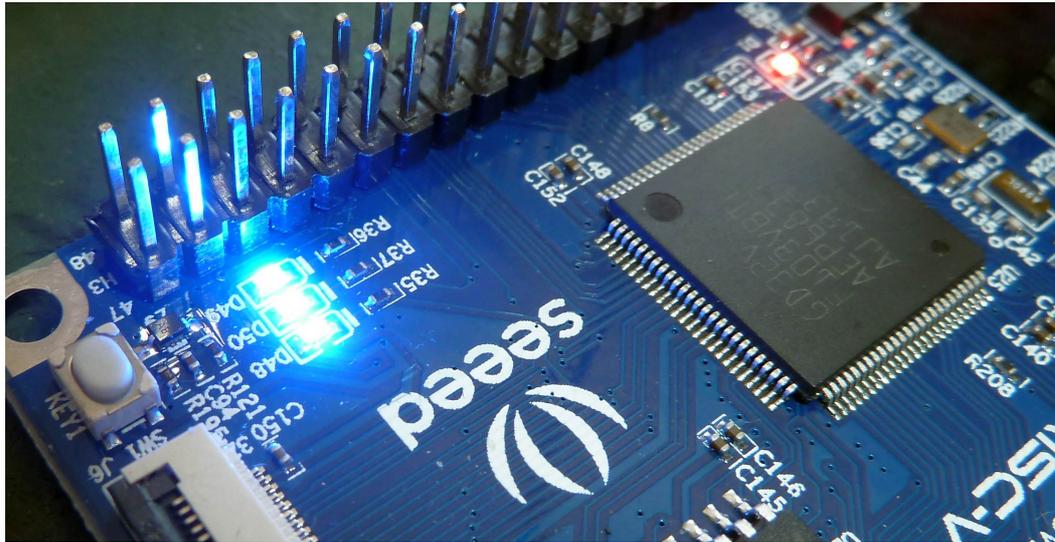

Core Sub-Architecture: RISC-V IMAC
Kit Contents: Seeed Studio GD32 RISC-V Dev Board

- Antratek: Seeed Studio GD32VF dev board
- Seeed: Seeed Studio GD32VF dev board

i/o port connections

Port A

PA.0 - WKUP/KEY1
PA.1 - ...
PA.2 - ...
PA.3 - ...
PA.4 - ...
PA.5 - SPI0_SCK Flash
PA.6 - SPI0_MISO Flash
PA.7 - SPI0_MOSI Flash
PA.8 - TXD
PA.9 - RXD
PA.10 - ...
PA.11 - ...
PA.12 - ...
PA.13 - JTMS
PA.14 - JTCK
PA.15 - JTDI

Port B

PB.0 - LED
PB.1 - LED
PB.2 - BOOT1
PB.3 - JTDO
PB.4 - nTRST
PB.5 - LED
PB.6 - I2C0_SCL EEPROM
PB.7 - I2C0_SDA EEPROM
PB.8 - ...
PB.9 - ...
PB.10 - ...
PB.11 - ...
PB.12 - TF_CS SD
PB.13 - SPI1_SCK SD
PB.14 - SPI1_MISO SD
PB.15 - SPI1_MOSI SD

Port C


PC.0 - FLASH_CS Flash
PC.1 - ...
PC.2 - ...
PC.3 - ...
PC.4 - ...
PC.5 - ...
PC.6 - ...
PC.7 - ...
PC.8 - ...
PC.9 - ...
PC.10 - ...
PC.11 - USB
PC.12 - USB
PC.13 - KEY2
PC.14 - OSC32_IN
PC.15 - OSC32_OUT

Port D

PD.0 - ...
PD.1 - ...
PD.2 - ...
PD.3 - ...
PD.4 - ...
PD.5 - ...
PD.6 - ...
PD.7 - ...
PD.8 - ...
PD.9 - ...
PD.10 - ...
PD.11 - ...
PD.12 - ...
PD.13 - ...
PD.14 - ...
PD.15 - ...


Port E

PE.0 - ...
PE.1 - ...
PE.2 - ...
PE.3 - ...
PE.4 - ...
PE.5 - ...
PE.6 - ...
PE.7 - ...
PE.8 - ...
PE.9 - ...
PE.10 - ...
PE.11 - ...
PE.12 - ...
PE.13 - ...
PE.14 - ...
PE.15 - ...

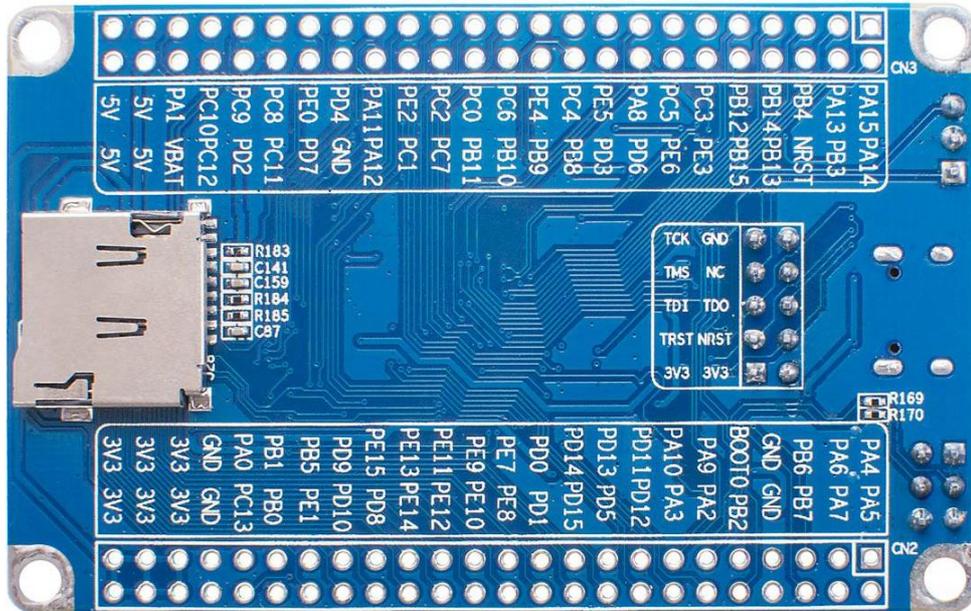

Connectors

- H1 = i/o PA, PB, PC, PD, 5V and GND
- H4 = i/o PA, PB, PC, PD, PE, GND and 3V3
- J4 = RS232 & GND
- J89 = JTAG connector
- J63 = BOOT0 & BOOT1
- J3 = USB-C Programming connector
- J6 = LCD connector
- J28 = Micro SD connector

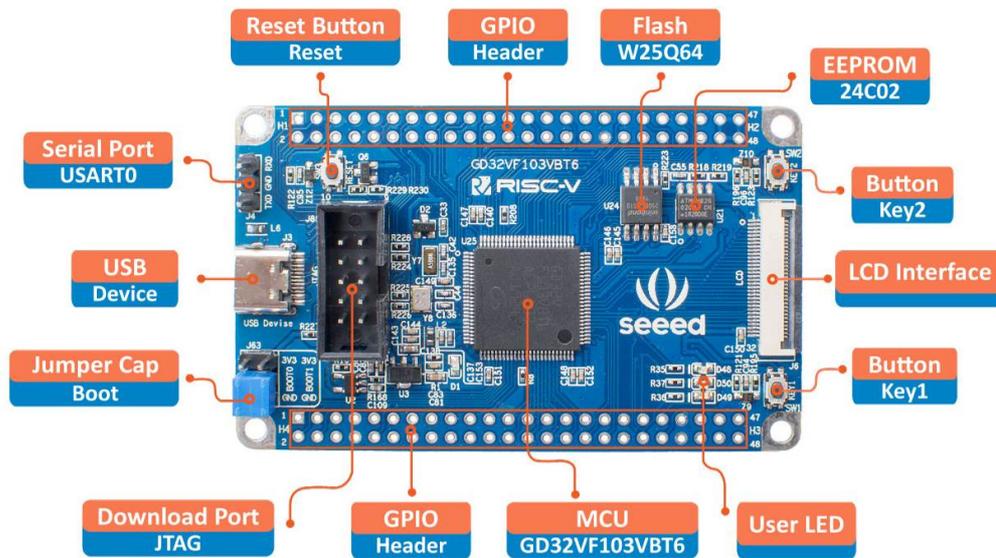

Hardware

- Three leds on PB.0, PB1 and PB.5
- Switch SW1 on PA.0
- Switch SW2 on PC.13
- Jumpers for boot mode setting
- Reset switch RST
- JTAG 14-pin connector
- LCD connector
- Micro SD connector
- SPI Flash
- I2C EEPROM
- 32.768 crystal

2. i/o ports

Port addresses

The port registers are memory mapped.
First the base addresses for the I/O-ports:

Port-A = 40010800
Port-B = 40010C00
Port-C = 40011000
Port-D = 40011400
Port-E = 40011800

Port register offsets

Label	PA/PB/PC/PD/PE	Function
x_CRL	00	Control reg. P0 to P7
x_CRH	04	Control reg. P8 to P15
x_IDR	08	Input data reg.
x_ODR	0C	Output data reg.
x_BSRR	10	Set/Reset reg. P0 to P15
x_BRR	14	Reset reg. P0 to P15
x_LCKR	18	Lock register

Values for port control (CRL/CRH)-Registers

- 0: Analog Input
- 1: Output Push/Pull, 10 MHz
- 2: Output Push/Pull, 2 MHz
- 3: Output Push/Pull, 50 MHz
- 4: Floating Input (Reset state)
- 5: Open-Drain Output, 10 MHz
- 6: Open-Drain Output, 2 MHz
- 7: Open-Drain Output, 50 MHz
- 8: Input with pull-up / pull-down
- 9: Alternate Function, Push/Pull, 10 MHz
- A: Alternate Function, Push/Pull, 2 MHz
- B: Alternate Function, Push/Pull, 50 MHz
- C: Reserved
- D: Alternate Function, Open-Drain, 10 MHz
- E: Alternate Function, Open-Drain, 2 MHz
- F: Alternate Function, Open-Drain, 50 MHz

The reset value for all port control registers is 44444444. More info in the GD32VF103_User_Manual_EN_V1.2.PDF from page 101.

3. RS232/USB driver

The USB chip on the SEED board is a dongle with the PL2303TA Prolific USB-chip. This chip needs a specific driver under Windows XP/7/8/10. Unzip this file and execute [PL2303-Prolific_DriverInstaller_v1200.exe](#). The default baudrate for the GD32VF controller is 115200 baud.

4. noForth memory map

RAM 20000000 - 20007FFF

```
20000000 HOT          \ warm Udata (max 200 bytes)
    ... UHERE        \ start of free Uspace
20000200 FLYBUF      \ FLYER buffer (400 bytes)
20000600 FLYBUF/
20000680 S0          \ data stack (80 bytes down)
20000880 R0          \ return stack (200 bytes down)
20000880 TIB         \ input buffer (80 bytes)
20000900 TIB/
20000900 SYSBUF      \ TIDY buffer (400 bytes)
20000D00 SYSBUF/     \ start of allotted RAM
    ... HERE         \ start of free RAM space
20008000 RAMBORDER
```

FLASH ROM 00000000 - 0001FFFF

```
0000    interrupt vectors
0200    FROZEN        \ cold Udata (max 200 bytes)
0400    ORIGIN        \ start of dictionary
    ...    CHERE      \ start of free dictionary space
1F000   BORDER
```

- BORDER and RAMBORDER are changeable uvalues (Udata).
- Udata is saved to FROZEN by FREEZE .
- At start-up (and reset or COLD) noForth moves the Udata at FROZEN to HOT .

5. interrupt vector table

See GD32VF103_User_Manual_EN_V1.2.PDF for more details (page 93-100).

0000	- Reset (Jump opcode)
000C	- CLIC INT SFT
001C	- CLIC INT TMR
0044	- CLIC INT BWEI
0048	- CLIC INT PMOVEI
004C	- WWDGT interrupt
0050	- LVD from EXTI interrupt
0054	- Tamper interrupt
0058	- RTC global interrupt
005C	- FMC global interrupt
0060	- RCU global interrupt
0064	- EXTI Line0 interrupt
0068	- EXTI Line1 interrupt
006C	- EXTI Line2 interrupt
0070	- EXTI Line3 interrupt
0074	- EXTI Line4 interrupt
0078	- DMA0 channel0 global interrupt
007C	- DMA0 channel1 global interrupt
0080	- DMA0 channel2 global interrupt
0084	- DMA0 channel3 global interrupt
0088	- DMA0 channel4 global interrupt
008C	- DMA0 channel5 global interrupt
0090	- DMA0 channel6 global interrupt
0094	- ADC0 and ADC1 global interrupt
0098	- CAN0 TX interrupts
009C	- CAN0 RX0 interrupts
00A0	- CAN0 RX1 interrupts
00A4	- CAN0 EWMC interrupts
00A8	- EXTI line[9:5] interrupts
00AC	- TIMER0 break interrupt
00B0	- TIMER0 update interrupt
00B4	- TIMER0 trigger and channel commutation interrupts
00B8	- TIMER0 channel capture compare interrupt
00BC	- TIMER1 global interrupt
00C0	- TIMER2 global interrupt
00C4	- TIMER3 global interrupt
00C8	- I2C0 event interrupt
00CC	- I2C0 event interrupt
00D0	- I2C1 event interrupt
00D4	- I2C1 event interrupt
00D8	- SPI0 global interrupt
00DC	- SPI1 global interrupt
00E0	- USART0 global interrupt
00E4	- USART1 global interrupt
00E8	- USART2 global interrupt
00EC	- EXTI line[15:10] interrupts
00F0	- RTC alarm from EXTI interrupt
00F4	- USBFS wakeup from EXTI interrupt
0114	- TIMER4 global interrupt
0118	- SPI2 global interrupt
011C	- UART3 global interrupt
0120	- UART4 global interrupt
0124	- TIMER5 global interrupt
0128	- TIMER6 global interrupt
012C	- DMA1 channel0 global interrupt
0130	- DMA1 channel1 global interrupt
0134	- DMA1 channel2 global interrupt
0138	- DMA1 channel3 global interrupt
013C	- DMA1 channel4 global interrupt
0148	- CAN1 TX interrupt
014C	- CAN1 RX0 interrupt
0150	- CAN1 RX1 interrupt
0154	- CAN1 EWMC interrupt
0158	- USBFS global interrupt